



1500 Sheet Feeder (1 of 2)

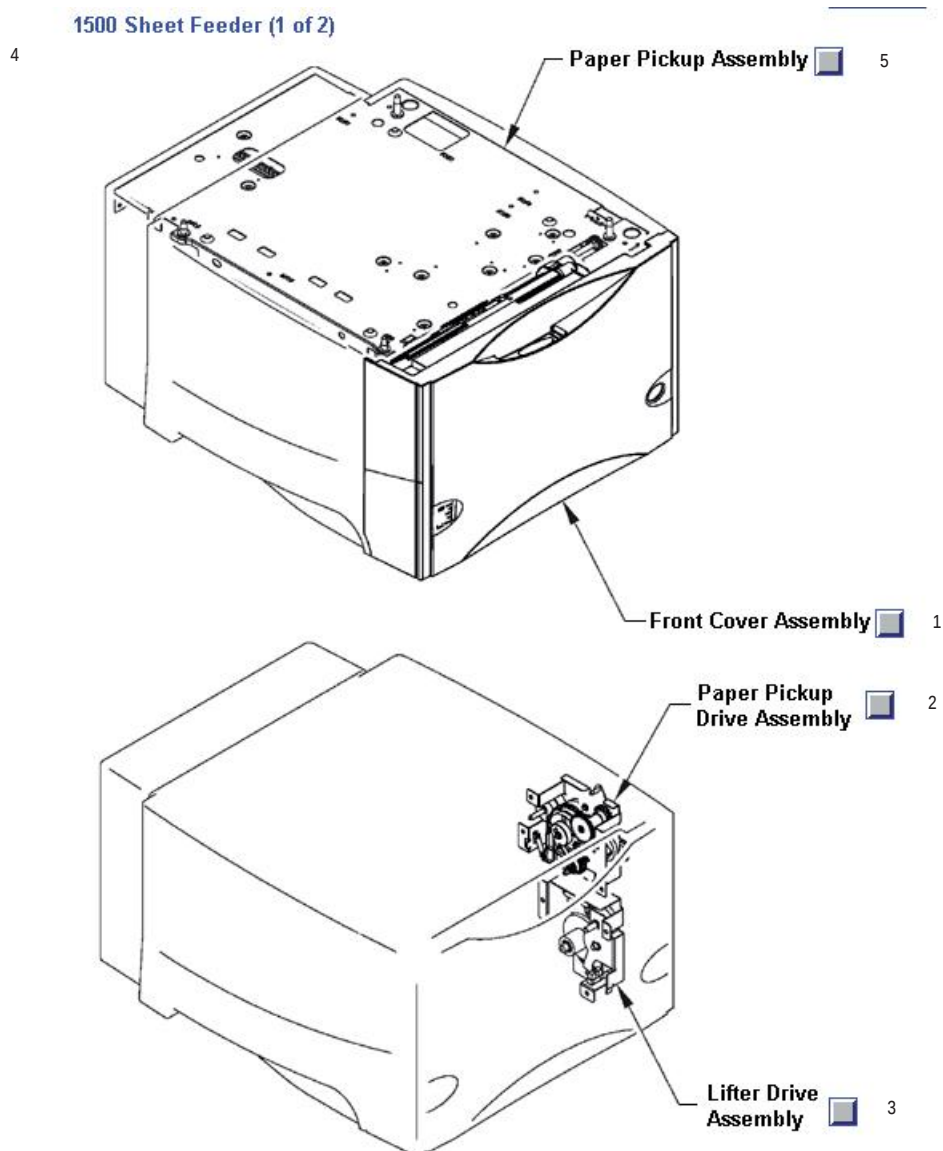


Ref	Part Number	Description
1	RM1-0273-070CN	Front cover (or door) - Provides access to load paper in the 1,500 sheet paper feeder assembly
2	RM1-1133-020CN	Paper pickup roller drive assembly for 1500 sheet feeder
3	RM1-1136-000CN	Lifter drive assembly for 1500 sheet feeder
4	Q2444-67902	1500 sheet paper tray and feeder assembly for LaserJet 4200/4300 series printers
5	RM1-0034-070CN	Paper pickup assembly - Paper pickup drive assembly

1500 Sheet Feeder (2 of 2)

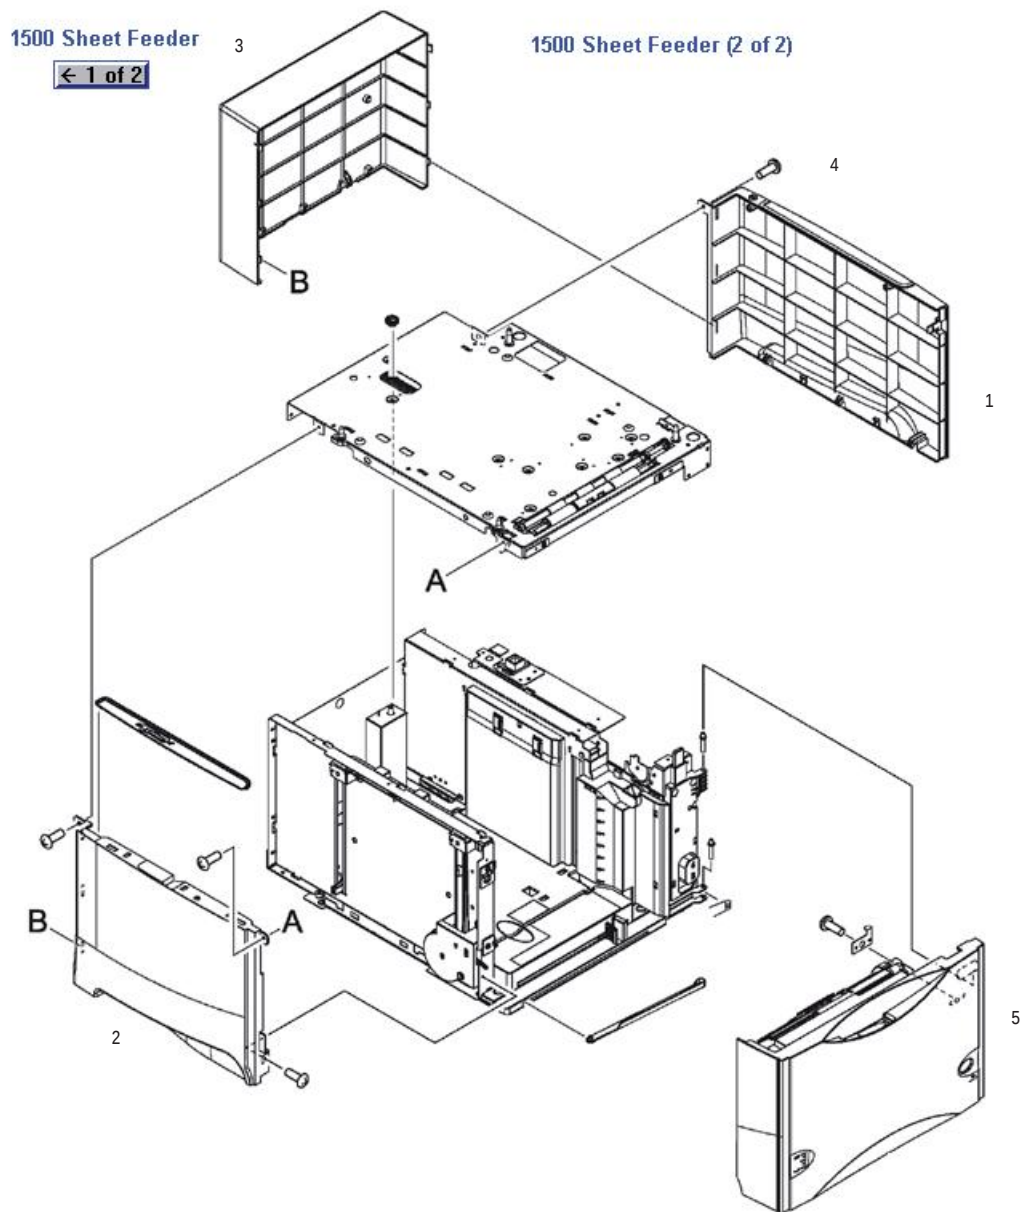

Ref	Part Number	Description
1	RC1-0661-000CN	Right side cover assembly - For the 1,500 sheet paper feeder assemb
2	RC1-0662-000CN	Left side cover assembly - For the 1,500 sheet paper feeder assembly
3	RC1-0663-000CN	Rear cover assembly - Box type cover for the rear of the 1,500 sheet paper feeder assembly
4	XA9-1420-000CN	M3 pan head phillips screw with captive flat and split-lock washers - 8mm long
5	RM1-0273-070CN	Front cover (or door) - Provides access to load paper in the 1,500 sheet paper feeder assembly


500 Sheet Feeder (1 of 2)

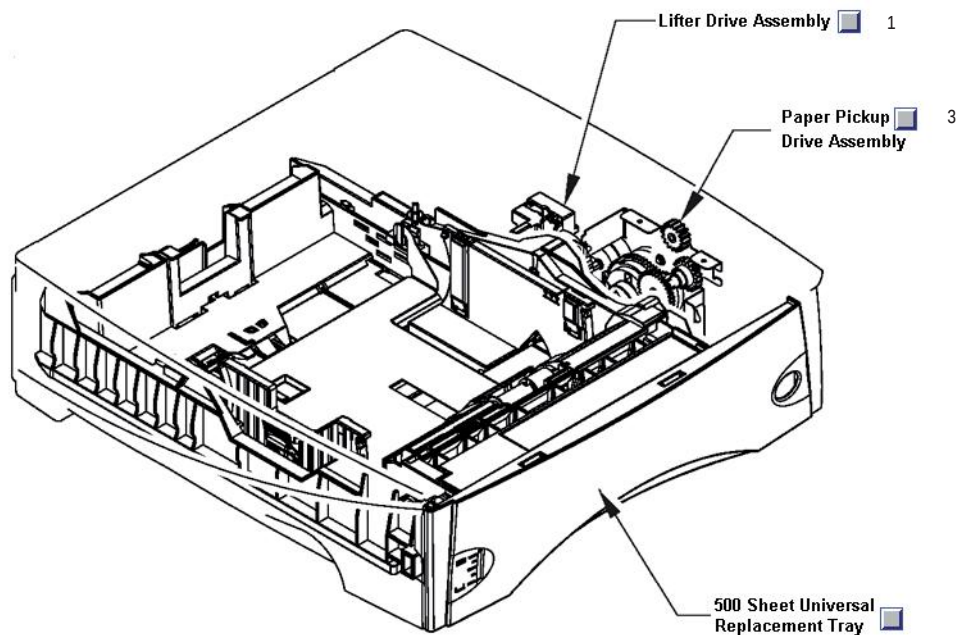2  500 Sheet Feeder

Ref	Part Number	Description
1	RM1-1094-000CN	Lifter drive assembly for 500 sheet feeder
2	Q2440-67903	500-sheet paper feeder and tray/cassette - This is the assembly frame and tray that the printer sits on top of
3	RM1-0056-000CN	Paper pickup drive assembly, 500 sheet feeder


500 Sheet Feeder (2 of 2)

500 Sheet Feeder (2 of 2)

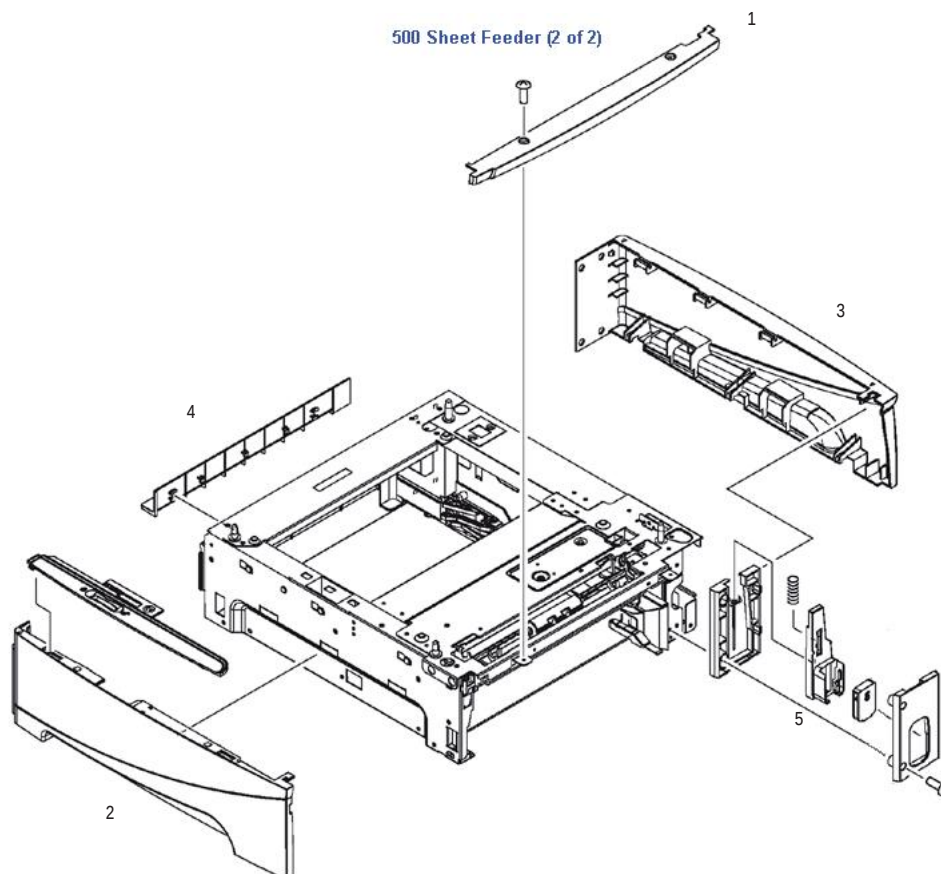


Ref	Part Number	Description
1	RC1-0486-020CN	Upper front cover - Small piece of plastic on top front edge of 500 sheet feeder
2	RC1-0487-020CN	Left side cover for 500 sheet paper feeder assembly
3	RC1-0488-020CN	Right side cover for 500 sheet paper feeder assembly
4	RC1-0509-000CN	Rear cover - Rear plastic cover for 500 sheet paper feeder
5	RC1-3304-000CN	Tray number display - Changeable tray number tab for optional 500 sheet feeder

Covers

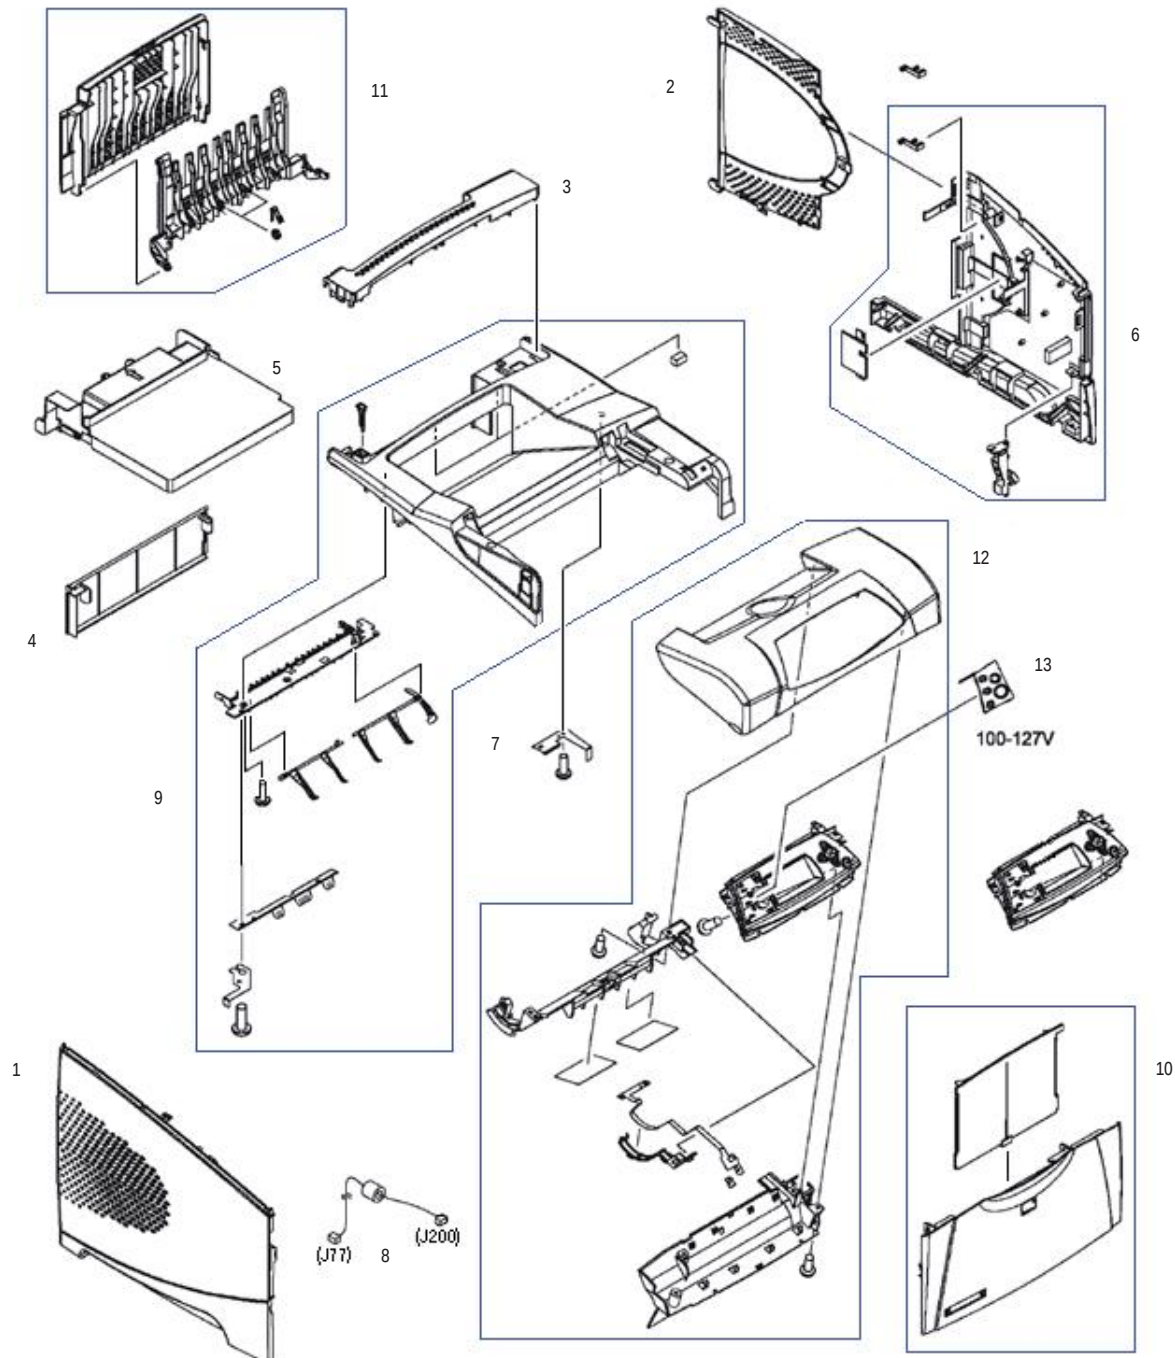


Ref	Part Number	Description
1	RM1-1077-000CN	Left side cover panel
2	RC1-0288-000CN	Formatter board cover
3	RC1-0289-000CN	Top rear cover of printer - Removes for Stapler/Stacker installation
4	RC1-3282-000CN	Lower rear cover - Covers rear of standard 500 sheet tray
5	RC1-3280-000CN	Duplexer slot cover - Removable lower rear cover for Duplexer attachment slo
6	RM1-1076-000CN	Right side cover assembly
7	RC1-0307-000CN	Grounding leaf spring - Attaches to right side bottom of top cover assembly
8	RM1-1190-000CN	Control panel cable
9	RM1-1081-000CN	Top cover assembly - Top paper output tray and top of printer
10	RM1-0050-050CN	Front cover - Drop down Tray 1
11	RM1-0027-020CN	Rear output tray assembly - Includes upper rear paper output tray and cover
12	RM1-1080-000CN	Cartridge access door cover for LaserJet 4250/4350 family
13	RC1-3356-000CN	Control panel overlay - English

Electrical Components

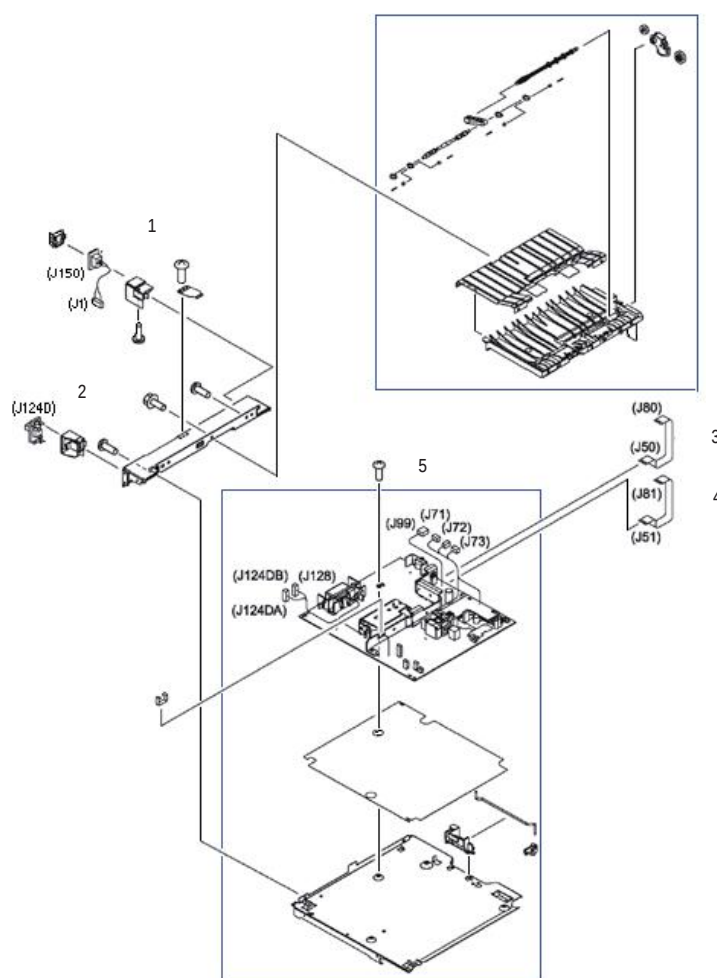


Ref	Part Number	Description
1	RM1-1218-000CN	A/C input connector/cable - 120VAC input connector to J1 power supply connector
	RM1-1219-000CN	A/C input connector/cable - 220VAC input connector to J1 power supply connector
2	XA9-1500-000CN	M3 pan-head Phillips screw with flat washer - 8mm long
3	RK2-0290-000CN	Ribbon cable - Between DC Controller board (J80) and power supply board (J50)
4	RK2-0288-000CN	Ribbon cable - Between DC Controller board (J81) and power supply board (J51)
5	XA9-1420-000CN	M3 pan head phillips screw with captive flat and split-lock washers - 8mm long

Feed Roller Assembly

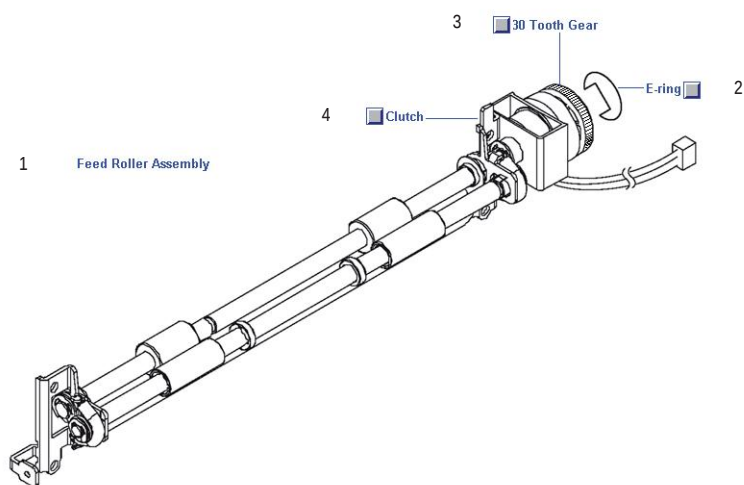


Ref	Part Number	Description
1	RM1-0012-020CN	Paper feed roller assembly
2	XD9-0234-010CN	E-Type retainer ring - Holds paper feed assembly gear
3	RU5-0050-000CN	30 tooth gear - Black plastic gear that attaches to paper feed assembly clutch
4	RK2-0349-000CN	Paper feed assembly clutch - Electro mechanical clutch that connects to the white 30 tooth gear

Internal Components (1 of 3)

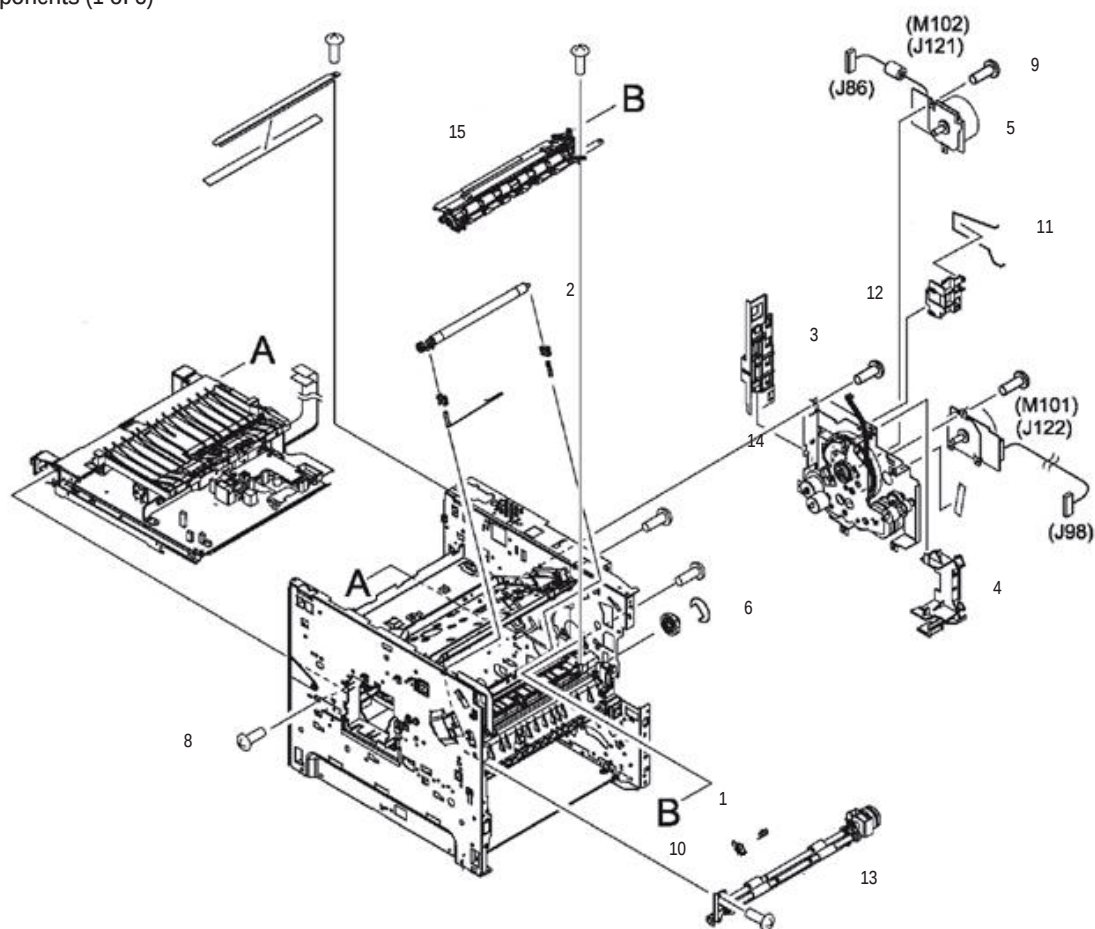


Ref	Part Number	Description
1	RC1-0061-000CN	Torsion spring
2	RM1-1110-000CN	Transfer roller assembly - Long black spongy roller - Transfers charge to paper
3	RC1-0269-020CN	DC Controller flat cable guide
4	RC1-0270-020CN	DC Controller board cable guide
5	RK2-0273-000CN	Main motor - M101
6	XD9-0232-000CN	E-ring keeper - Attaches to drive end of registration roller to secure cluster gear
7	RU5-0015-000CN	14T/30T cluster gear - Attaches to drive end of registration roller
8	XA9-1500-000CN	M3 pan-head Phillips screw with flat washer - 8mm long
9	XA9-1503-000CN	M3 truss head (Flanged) phillips screw (Black oxide finish) - 6mm long
10	RC1-0060-030CN	Paper feed sensor flag for Tray 1
11	RC1-3339-000CN	Fan rod - Metal rod that mounts against Fan 2 on right side of printer - Used for noise reduction of Fan 2
12	RC1-3340-000CN	DC Controller board cable guide
13	RM1-0012-020Cn	Paper feed roller assembly
14	RM1-1066-000CN	Main drive assembly - Main gear assembly on right side of printer
15	RM1-1098-030CN	Registration roller assembly

Internal Components (2 of 3)

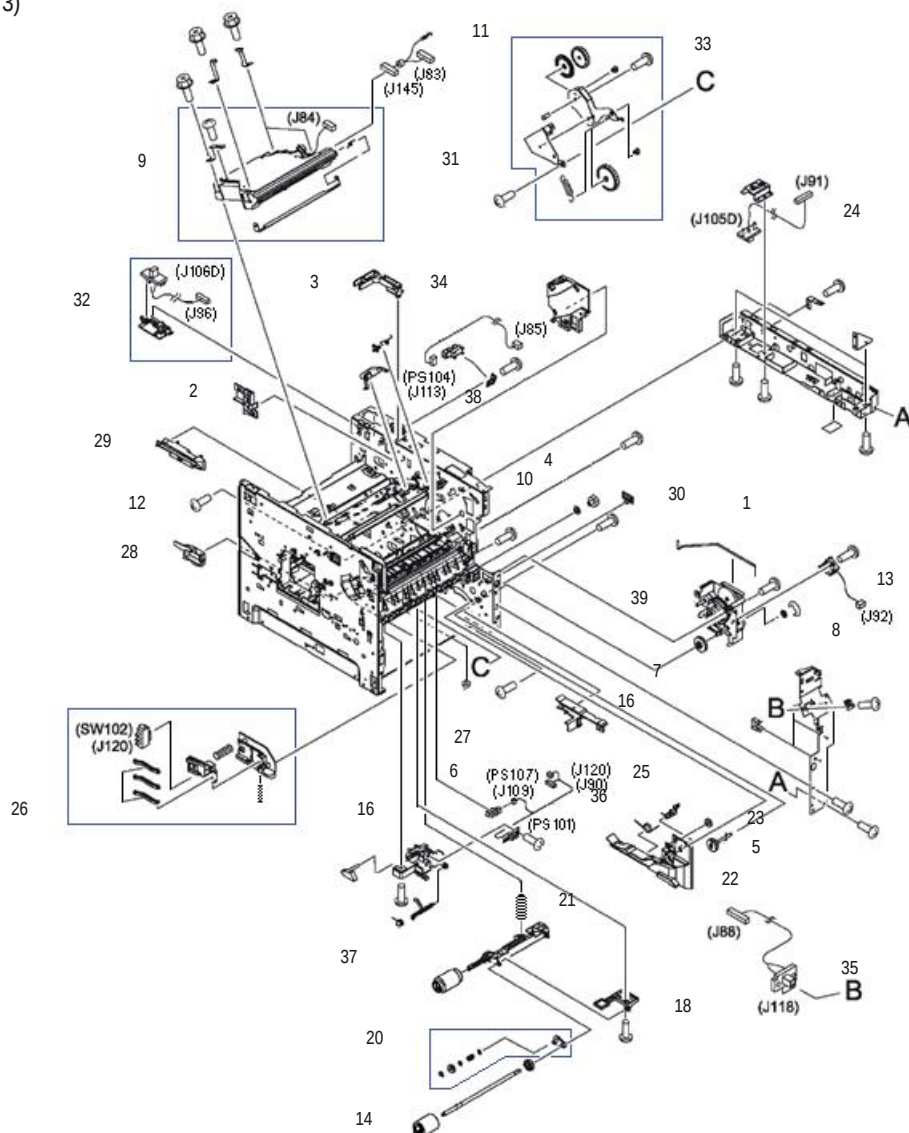

Ref	Part Number	Description
1	RC1-0268-000CN	Metal rod between external power button and switch on power supply board
2	RC1-0340-020CN	Scanner cable guide - Mounts below accessory interface connector cable on right side of chassis
3	RC1-0273-000CN	Paper feed belt guide for left side
4	RU5-0045-020CN	18 tooth gear - Located on right side of printer in the Tray 2 paper pickup assembly
5	RL1-0264-000CN	Gear - Gear with attached shaft - Driven by pickup drive assembly on right front of printer
6	WG8-5624-000CN	Photo-sensor (TLP1241) - Sensor flag activated
7	RU5-0040-000CN	Gear - 23 tooth gear in lower front section of pickup drive assembly
8	RC1-0206-000CN	Bushing - On right side of paper pickup drive assembly
9	RM1-1067-030CN	Laser/scanner assembly for 4250/4350 series LaserJet printers
10	RC1-0264-000CN	Feed roller shaft bushing - Bushing on right side of printer that supports the feed roller shaft.
11	RM1-1198-000CN	Laser cable - Connects between DC Controller board and laser scanner unit - J145 to J83
12	XA9-1500-000CN	M3 pan-head Phillips screw with flat washer - 8mm long
13	RK2-0269-000CN	Paper pickup solenoid
14	RM1-0037-020CN	Paper feed/separation roller assembly - Black rubber roller on a blue plastic cylinder
15	RC1-0208-030CN	Paper sensor flag holder
16	RC1-0243-000CN	Right front power supply guide - Attaches to right side of printer chassis
17	RC1-3352-000CN	Paper pickup arm - Pickup and feed roller holder for Tray 2 paper pickup ass
18	RC1-0212-000CN	Paper pickup arm holder - Holder for pickup roller shaft
19	RC1-0371-000CN	23 Gear - Gear that drives paper feed roller - Attaches to feed roller shaft
20	RL1-0013-000CN	Swing plate - Pivot mount for pickup roller shaft
21	RC1-0213-000CN	Compression spring - Provides pressure for paper pickup and feed rollers in Tray 2 pickup assembly
22	RC1-0153-030CN	Right side Tray 2 paper cassette guide
23	RC1-0330-020CN	Solenoid damper - Locate on right side of Tray 2 guide - Works with kicker to dampen Tray 2 pickup solenoid on right side of tray guide
24	RM1-1192-000CN	Power cable for Tray 3 paper feeder - Black connector with 42mm six wire cable to white connector
25	RL1-0015-000CN	Kicker assembly - Mounts to right side of the printer and is connected to the right side guide - Senses when the paper cassette is inserted into the printer
26	RM1-0041-020CN	Tray 2 paper size tray sensing assembly - White plastic tray size sensing fingers and microswitch assembly
27	RB1-8107-000CN	Rubber foot - Replacement rubber foot for the bottom of the printer (four used)
28	RC1-0242-000CN	Inner right side edge guard - Small plastic guard that protects wires inside chassis on right side of printer.
29	RC1-0244-000CN	Support guide - Supports right rear side of power supply board
30	RC1-0247-000CN	Rightsideedgeguard-Smallplasticguardthatprotectswires-Mountsonrightoutsideofprinterchassis
31	XA9-1503-000CN	M3 truss head (Flanged) phillips screw (Black oxide finish) - 6mm long
32	RM1-0042-000CN	Accessorycable/connector-Connectorforstackerandstacker/stapleraccessoryattoprightrearofprinter
33	5851-2766	Swing plate assembly - For Tray 2 paper lift assembly - Located between the main gear assembly and the fuser, just above the power supply - Contains swing plate assembly and new fuser pressure release gear
34	RM1-1189-000CN	Top bin full sensor cable
35	RM1-1193-000CN	Envelope feeder cable - From DC Controller board to envelope feeder connector - Includes envelope feeder connector
36	RC1-0254-000CN	Torsion spring - Provides tension for Tray 2 kicker - Mounts on Tray 2 guide assembly
37	RC1-1923-000CN	Torsion spring - Provides tension for paper sensor flag
38	WG8-5624-000CN	Photo-sensor (TLP1241) - Sensor flag activated
39	RM1-0034-070CN	Paper pickup assembly - Paper pickup drive assembly for Tray 1/Multipurpose input tray


Internal Components (3 of 3)

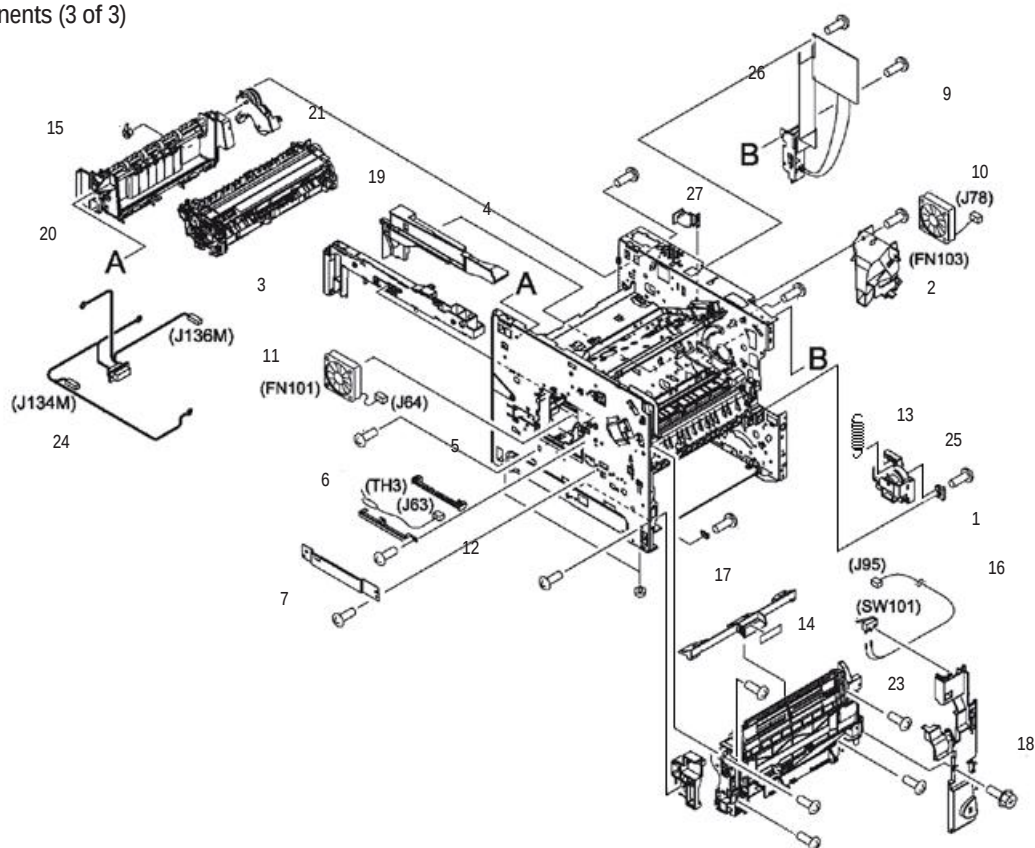

Ref	Part Number	Description
1	RC1-0200-020CN	Lifter drive assembly support - Tray 2 paper pickup lifter drive support assembly
2	RC1-3338-000CN	Fan duct - Air duct and fan mount for Fan 2 - Fan duct on right side of printer
3	RC1-0273-000CN	Paper feed belt guide for left side
4	RC1-0274-020CN	Paper feed belt guide for right side
5	RC1-0342-020CN	Thermistor holder - Plastic inside half of thermistor holder
6	RC1-0343-020CN	Thermistor holder - Metal outside half of thermistor holder
7	RC1-0344-020CN	Fan cover - Metal support strap that main cooling fan fastens to - For fan FN101, main cooling fan on right left side of printer
8	RC1-0386-000CN	Connecting cable guide - Routes and protects all cables running from top portion of printer to the DC controller board
9	XA9-1500-000CN	M3 pan-head Phillips screw with flat washer - 8mm long
10	RK2-0280-000CN	Cooling fan on right side of printer - Print cartridge fan - FN103
11	RK2-0278-000CN	Cooling fan on left side of printer - FN101
12	RK2-0359-000CN	Environment temperature detection thermistor - Detects ambient air temperature to determine length of time for fuser warm up
13	RC1-0198-000CN	Tension spring - Provides tension for lifter drive assembly
14	WC4-5139-000CN	Top cover interlock access switch
15	RC1-0136-000CN	Roller bushing - Bushing that supports middle of paper delivery roller
16	RG1-4213-000CN	Top Cover cable - From top cover microswitch (SW101) to DC Controller board
17	RC1-0320-000CN	Envelope cover - Plastic piece above Tray 1 pickup roller
18	RC1-0019-000CN	Inner right front cover
19	RM1-1083-070CN	Fuser assembly - For LaserJet 4250/4350 series - 220 VAC
20	RM1-0026-040CN	Paper delivery assembly - Paper output roller assembly
21	RM1-0002-030CN	Duplexing pendulum assembly - Gear assembly that transfers power from main motor to run duplexing


Ref	Part Number	Description
22	RM1-1074-040CN	Tray 2 lifter drive assembly - Provides lift support for paper tray
23	RM1-1097-040CN	Tray 1 paper input assembly
24	RM1-1216-000CN	Fuser cable - Main fuser cable for LaserJet 4250 series
25	RC1-3338-000CN	Fan duct - Air duct and fan mount for Fan 2 - Fan duct on right side of printer
26	RM1-1108-000CN	DC controller board - DC Controller for LaserJet 4250/4350 series
27	RC1-0386-000CN	Connecting cable guide - Routes and protects all cables running from top portion of printer to the DC controller board

Main Drive Assembly

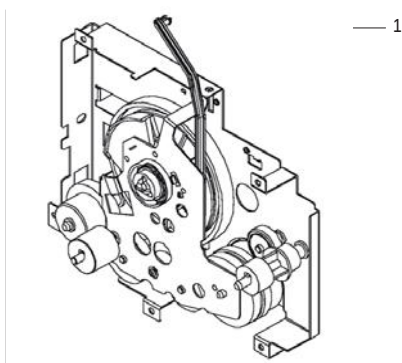

Ref	Part Number	Description
1	RM1-1066-040CN	Main drive assembly - Main gear assembly on right side of printer

Tray 1 Pickup Assembly

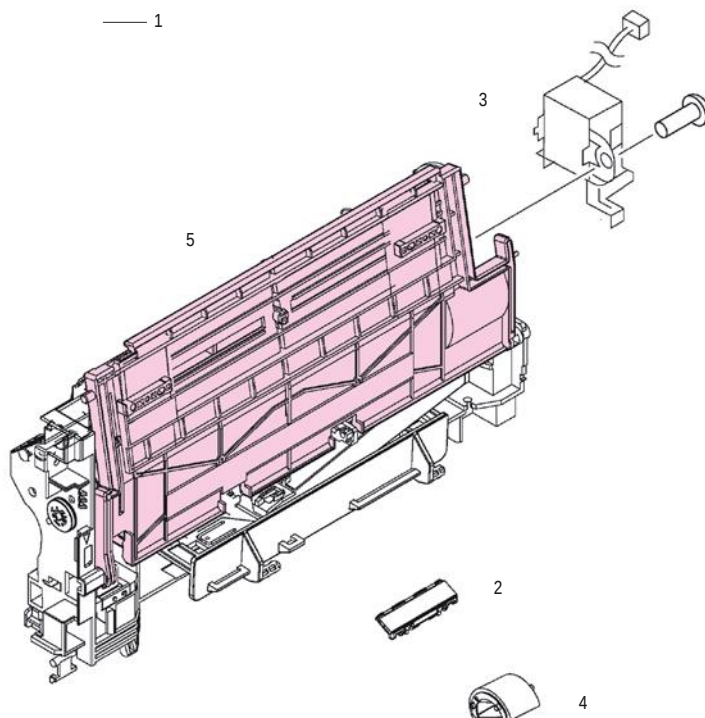

Ref	Part Number	Description
1	RM1-1097-040CN	Tray 1 paper input assembly
2	RL1-0007-000CN	Tray 1 paper separation pad
3	RK2-0276-000CN	Tray 1 solenoid - Engages Tray 1 pickup roller
4	RL1-0019-000CN	Tray 1 pickup roller - D shaped roller under envelope cover
5	RM1-0005-020CN	Drop down Tray 1 - Includes adjustable paper width guide assembly